

## Universal Base Rails and Install Kits (Universal 4-Bolt/10-Bolt Rails)

**30686 UNIVERSAL BASE RAILS**—The perfect rails for installing fifth wheel hitches, in a 4-Bolt or 10-Bolt application. Can be used with all Husky fifth wheel products and requires the use of a Husky install kit. Finish is durable black powdered coat.  
*You must order either a custom bracket kit OR the 31622 10-Bolt Universal Install Kit for 10-Bolt installations, or use the 31563 4-Bolt Kit for 4-Bolt Installations.*




Universal Install Kit (4-Bolt 31563 pictured)



Description	Part #
<b>UNIVERSAL BASE RAIL KIT — FULL SIZE PICKUPS, 6-1/2' &amp; 8' Bed Lengths</b>	
Universal 4-Bolt/10-Bolt Base Rails; Includes Two Base Rails only — requires an Install Kit (below) or a Custom Bracket Kit (next page), sold separately	<b>30686</b>
Universal Install Kit for 10-Bolt Base Rails (Angle brackets and associated hardware in one box for installations on most applications (requires drilling)	<b>31622</b>
Universal Install Kit for 4-Bolt Base Rails (Four angle brackets and associated hardware in one box for installation on most applications (requires drilling)	<b>31563</b>

## Custom Bracket Kits for Base Rails

For the perfect fit, use Husky Base Rails with one of the the Custom Bracket Kits on the next page to fit your truck to the Husky Fifth Wheel Hitch, Glider, and Gooseneck Hitches. Bracket Kits come with hardware and easy-to-install instructions. Custom brackets significantly reduce installation time and guarantee an exact fit for your pickup. Some clamp-on and bolt-on brackets require **no drilling** into the truck frame when using 4-bolt Base Rails, and all attachment types are designed for the best possible installation. *See next page.*

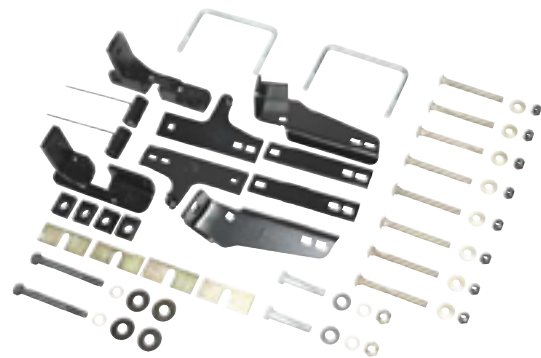

Husky Custom Bracket Kits are used with Base Rails for an exact fit and reduced installation time, and include hardware and easy-to-follow instructions

## Clip-on Nut Service Kit for Base Rail Bracket Kits

Using the Clip-on 5/8" Nut Service Kit for Husky 4 bolt fifth wheel hitch installation kits makes it possible for a true one-person fifth wheel installation. Reduces time and cost for a typical fifth wheel hitch installation. Simplifies tight work conditions for all vehicle installs.



32767

Description	Part #
Clip-on Nut Service Kit	<b>32767</b>

# Base Rails & Brackets



CUSTOM BRACKET KITS, REQUIRED FOR USE WITH 31323 4-BOLT OR 30686 10-BOLT BASE RAIL					Bracket Part #
Year	Make	Pickup Model	Bed Length	Attachment Type	
1973-1987	Chev/GMC	Pickup	6-1/2' & 8'	Universal bracket kit, drilling required	<b>31563</b>
1988-1998	Chev/GMC	C/K Pickup 1500, 88-99 C/K Pickup 2500/3500	6-1/2' & 8'	Custom brackets, drilling required	<b>31402</b>
1999-2010	Chev/GMC	Silverado & Sierra, All (includes up to 07 Classic) plus 07-09 2500HD & 3500	6-1/2' & 8'	Custom brackets, drilling required	<b>31415</b>
2007-2013	Chev/GMC	Silverado & Sierra 1500 New Body	6-1/2' & 8'	Custom brackets, drilling required	<b>31396</b>
2014-2015	Chev/GMC	Silverado & Sierra 1500 New Body (Long Bed ONLY), (Except Double & Crew Cabs)	8'	Custom brackets, drilling required	<b>31396</b>
2007-2017	Chev/GMC	Silverado & Sierra 1500 New Body	5-1/2' & 6-1/2' & 8'	Custom brackets, drilling required	<b>32831</b>
2001-2010	Chev/GMC	2500/3500 With or Without Integrated Brake Control Plus 99-07 Classic 1500	6-1/2' & 8'	Custom brackets, drilling required	<b>31397</b>
2011-2017	Chev/GMC	Pickup 2500/3500	6-1/2' & 8'	Custom brackets, no drill (frame) Bolt-on	<b>31852</b>
2011-2017	Chev/GMC	Pickup 2500/3500	6-1/2' & 8'	Custom brackets, drilling required Bolt-on	<b>31853</b>
1993-Older	Dodge/Ram	Ram Pickup	6-1/2' & 8'	Universal bracket kit, drilling required	<b>31563</b>
1994-2002	Dodge/Ram	Ram PU, All (except 2002 1500)	6-1/2' & 8'	Custom brackets, drilling required	<b>31404</b>
2002-2006	Dodge/Ram	Ram Pickup 1500, plus 06 1500 Mega Cab	6-1/2' & 8'	Custom brackets, drilling required	<b>31565</b>
2002-2006	Dodge/Ram	Ram Pickup 1500 (Except '06 1500 non-Mega Cab)	6-1/2' & 8'	Custom brackets, no drill, clamp-on	<b>31413</b>
2007-2008	Dodge/Ram	Ram Pickup 1500	6-1/2' & 8'	Custom brackets, drilling required	<b>31565</b>
2007-2008	Dodge/Ram	Ram Pickup 1500	6-1/2' & 8'	Custom brackets, no drill clamp-on	<b>31413</b>
2009-2017	Dodge/Ram	Ram Pickup 1500, all models (Except '13-'17 Factory Air Suspension)	5-1/2' & 6-1/2' & 8'	Custom brackets, no drill (frame) clamp-on	<b>31566</b>
2003-2009	Dodge/Ram	Ram Pickup 2500, 3500 (except 3500HD 4WD)	6-1/2' & 8'	Custom brackets, drilling required	<b>31565</b>
2003-2012	Dodge/Ram	Ram Pickup 2500, 3500	6-1/2' & 8'	Custom brackets, no drill (frame) clamp-on	<b>31413</b>
2013 ONLY	Dodge/Ram	Ram Pickup 2500 ONLY, all models	6-1/2' & 8'	Custom brackets, drilling required	<b>32084</b>
2014-2017	Dodge/Ram	Ram Pickup 2500 ONLY, all models	6-1/2' & 8'	Custom brackets, drilling required	<b>32556</b>
2013-2017	Dodge/Ram	Ram Pickup 3500 ONLY, all models (Except '14-'17 Factory Air Suspension)	6-1/2' & 8'	Custom brackets, no drill (frame) Bolt-on	<b>32221</b>
2013-2017	Dodge/Ram	Ram Pickup 3500 ONLY, all models	6-1/2' & 8'	Custom brackets, no drill (frame) Bolt-on	<b>33073</b>
1997-2004	Ford	F150 Heritage (old body)	6-1/2' & 8'	Custom brackets, drilling required	<b>31409</b>
2004-2014	Ford	F-150 (Clamp On)	6-1/2' & 8'	Custom brackets, no drill, clamp-on	<b>31564</b>
2015-2017	Ford	F-150 (New Aluminum Body)	5-1/2' & 6-1/2' & 8'	Custom brackets, drilling required	<b>32858</b>
1998-Older	Ford	F250HD / F350, plus 96-Older F150 / 250	6-1/2' & 8'	Universal bracket kit, drilling required	<b>31563</b>
1999-2004	Ford	F-250/350 Super Duty	6-1/2' & 8'	Four bolt drill. Top frame rail mounting	<b>31405</b>
1999-2004	Ford	F-250/350 Super Duty	6-1/2' & 8'	Custom brackets, drilling required	<b>31406</b>
1999-2007	Ford	F-250/350 Super Duty	6-1/2' & 8'	Custom brackets, no drill (frame), bolt-on	<b>31407</b>
2008-2016	Ford	F-250/350/450 Super Duty (Except chassis cab)	6-1/2' & 8'	Custom brackets, drilling required	<b>31408</b>
2017	Ford	F-250/350/450 Super Duty (Except chassis cab) (New Aluminum Body)	6-1/2' & 8'	Custom brackets, drilling required	<b>33094</b>
2005-2015	Ford	F-250 (Except '11-'15 Diesel Pick-Ups)	6-1/2' & 8'	Custom brackets, drilling required	<b>31412</b>
2005-2016	Ford	F-350 plus 08-09 F-450 Super Duty (Except '11-'16 Diesel Pick-Ups)	6-1/2' & 8'	Custom brackets, drilling required	<b>31412</b>
2004-2015	Nissan	Titan King Cab plus 08-09 Titan Crew Cab Pickup	5-1/2' & 6-1/2' & 8'	Custom brackets, drilling required	<b>31395</b>
2016	Nissan	Titan King Cab plus 08-09 Titan Crew Cab Pickup	5-1/2' & 6-1/2' & 8'	Custom brackets, drilling required	<b>TBD</b>
1999-2006	Toyota	Tundra Pickup	6-1/2' & 8'	Universal bracket kit, drilling required	<b>31563</b>
2007-2017	Toyota	Tundra Pickup	5-1/2' & 6-1/2' & 8'	Custom brackets, drilling required	<b>31410</b>
		Universal Style, for Older Full Size Pickups	6-1/2' & 8'	See huskytow.com for fits; drilling required	<b>31563</b>
<b>4 BOLT BASE RAIL ADAPTER BRACKET KITS. THESE KITS REQUIRE THE PURCHASE OF UNIVERSAL KIT 31563.</b>					
2002-2008	Dodge	Ram Pickup Full Size 1500 (except Mega Cab)	6-1/2' & 8'	Adapter brackets for 4-Bolt Kit; drilling required	<b>30640</b>
2009-2017	Dodge	Ram Pickup 1500 4-Bolt Adapter Kit	6-1/2' & 8'	Adapter brackets for 4-Bolt Kit; drilling required	<b>30665</b>
2002-2013	Dodge	Ram Pickup Full Size 2500 (except Mega Cab)	6-1/2' & 8'	Adapter brackets for 4-Bolt Kit; drilling required	<b>30607</b>
2002-2012	Dodge	Ram Pickup Full Size 3500 (except Mega Cab)	6-1/2' & 8'	Adapter brackets for 4-Bolt Kit; drilling required	<b>30607</b>
1996-Older	Ford	F-150	6-1/2' & 8'	Adapter brackets for 4-Bolt Kit; drilling required	<b>30607</b>
2004-2013	Ford	F150 Kit 10-Bolt/4-Bolt	6-1/2' & 8'	Custom brackets for 4- & 10-Bolt Kit; drilling required	<b>30619</b>
1997-Older	Ford	F-250/350	6-1/2' & 8'	Adapter brackets for 4-Bolt Kit; drilling required	<b>30607</b>
1999-2016	Ford	F-250/350/450 Super Duty (Except chassis cab)	6-1/2' & 8'	Adapter brackets for 4-Bolt Kit; drilling required	<b>30607</b>

# Base Rails & Brackets



10 BOLT BASE RAIL ADAPTER BRACKET KITS. THESE KITS REQUIRE THE PURCHASE OF UNIVERSAL KIT 31622.					
2002-2008	Dodge	1500 10-Bolt Kit	6-1/2' & 8'	Adapter bracket for 10-Bolt Kit; drilling required	<b>30562</b>
2003-2012	Dodge	2500/3500 10-Bolt Kit	6-1/2' & 8'	Adapter bracket for 10-Bolt Kit; drilling required	<b>30582</b>
2004-2013	Ford	F150 Kit 10-Bolt/4-Bolt	6-1/2' & 8'	Custom brackets for 4- & 10-Bolt Kit; drilling required	<b>30619</b>
2007-2017	Toyota	Tundra 10-Bolt Tube Spacer Kit	5-1/2' & 6-1/2' & 8'	Spacer tubes for 10-Bolt Kit; drilling required	<b>30600</b>
2000-2006	Toyota	Tundra 10-Bolt Tube Spacer Kit	6-1/2' & 8'	Spacer tubes for 10-Bolt Kit; drilling required	<b>30597</b>
ADAPTER BRACKET KIT. FITS BOTH 4 & 10 BOLT BASE RAILS. REQUIRES THE PURCHASE OF UNIVERSAL KIT 31622 OR 31563.					
2004-2014	Ford	F150 Kit 10-Bolt/4-Bolt	6-1/2' & 8'	Custom brackets for 4- & 10-Bolt Kit; drilling required	<b>30619</b>

## Husky Base Rail Spacer Kit

Husky Replacement Base Rail Spacer Kit for Husky Fifth wheel base rails.

Description	Part #
Base Rail Spacer Kit	<b>32254</b>



## Additional Husky Base Rail Accessories

Additional Brackets & Hardware	Qty/Hitch	Part #
Custom Bracket Kit for use with 31404: Fits Dodge 2002-2005 Ram PU 1500, 2003-2005 2500, 6-1/2' & 8' Bed	1	<b>31414</b>
Straight "L" Bracket Service Kit	1	<b>31385</b>
Left & Right Angle Bracket Replacement Kit	1	<b>31401</b>
Hardware Service Kit for 31563	1	<b>31418</b>
Base Rail 1/4" Spacer Kit	1	<b>31419</b>
Base Rail Tall Spacer Block kit, Bag/4	1	<b>31712</b>
Adapter Bracket for Dodge Ram PU (MUST be used with 31563) (Limited Supply)	1	<b>05680</b>
Clip-On Nut Service Kit	1	<b>32767</b>
Wheel Bolt Kit Pkg/8	1	<b>31417</b>
Center Bolt Kit to use with 20K, 25K, 26K Fifth Wheel Hitches & Rollers (Black Series Only)	1	<b>053362</b>
Center Bolt Kit to use both Black & Silver Series 5th Wheel Hitches & Rollers	1	<b>32059</b>
Replacement Spacer Tube Kit for the 31622 Kit (Used on 02-08 1500 Dodge PU, 2003-2010 2500/3500 Dodge PU, 6-1/2' & 8' Bed)	1	<b>30575</b>
32221 Dodge Ram 3500 U-Bolt Service Kit	1	<b>32222</b>
32221 Dodge Ram 3500 Hardware Service Kit (Spacer's-32224 & U-Bolts- 32222 NOT INCLUDED)	1	<b>32223</b>
32221 Dodge Ram 3500 Spacer Service Kit	1	<b>32224</b>